




כיכרות עם המכשיר

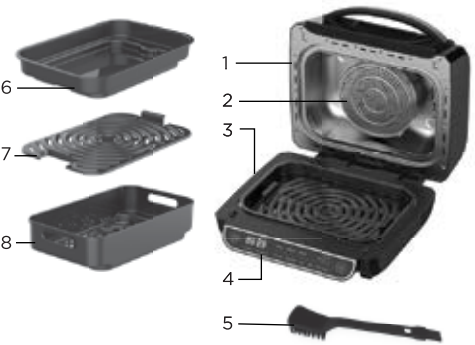

- מכסה.
- מן נדחים (נשלף).
- גוף המכשיר.
- לוח בקרה.
- מברשת ניקוי.
- סיר נשלף (NON-STICK).
- רשת צליה נשלפת (NON-STICK).
- סלסלת טיגון נשלפת (NON-STICK).

יעוד

מכשיר זה נועד לאפיה, צליה, ייבוש וטיגון מזון ללא שמן בטכנולוגית סנכרון אוויר חם, מיועד לשימוש ביתי בלבד. ככל שימוש אחר עלול לגרום נזק למכשיר, לסביבה או לפציעות.

הנחיות בטיחות חשובות

- אנא קראו את מדריך השימוש בעיון לפני השימוש במוצר.
- שמרו את כל חומרי האריזה 14 יום ממועד הרכישה.
- סנכנת התחשמלות! אין לגבול את כבל החשמל, התקנו גוף המכשיר או המכסה במים.
- לפני השימוש במכשיר, הקפידו להתיר את כל כבלי החשמל הכרוכים בכב.
- באשר המכשיר פועל אי לאחר השימוש, סמפטורות המשטח החיצוניות גבוהה, הנמנע ממגע בכדי למנוע כוויות.
- הרחיקו את המכשיר מרישק ידם של ילדים.
- כשהיחידה מופעלת, אין לנודנ את הכבל או התקנו.
- אין לתלות את כבל החשמל על קצה ארון/שולחן או על גבי משטח חם.
- אם כבל החשמל או התקנו פגומים, או שיש חשד לתקלה, הפסיקו להשתמש במכשיר ופנו לאחת מתחנות השירות של היבוא או לחנות ממנה המוצר נרכש.
- אם פתיל הדחייה ניווק, כדי להימנע מסכנה, החלפתו תעשה על ידי היצרן, אי עדיי סוכן השירות שלו, או על ידי אדם המוסמך לכך בלבד.
- אי עמידה בגב מסוכנת ותוביל לביטול האחריות.
- אין להניח חפצים בנדים על כבל החשמל או להדק את כבל החשמל.
- יש להוציא את המכשיר ממקור מתח כשאנים בשימוש.
- יש להשתמש באביזרים היעודיים שסופקו על ידי היבואן בלבד.
- שימוש באביזרים שאנים מאושרים יובילו לביטול האחריות.
- יש להוציא את המכשיר על גבי משטח שטוח, מאוזן, בסביבה יבשה ואין להשתמש בו מחוץ לבית או בסביבה להח (למשל חדר האמבטיה).
- למנהל השימוש במכשיר, שמח לפחות כ-15 ס"מ מרוחק מצדדיו, מעליו ומאחוריו לזרימת אוויר.
- הרחיקו את המכשיר מחומרים דליקים.
- המכשיר מיועד לבישול מזון בלבד.
- אין לשים תחיותו מזון גדולות או חפצי מתכת הדבר עלול להוביל לשריפה.
- אין לחמם במכשיר, נייר, פלסטיק, בד, פריטים דליקים.
- טרם הדזה או ניקוי המכשיר, נתקו את המכשיר ממקור מתח והמתנית עד שיתקרר.
- לאחר פעולת המכשיר, חלקיו והמזון חמים.
- המנוע ממגע ישיר שאנים עם אמצעי להגנה מחום.
- המכשיר פועל בטכנולוגית סינכרון חום באוויר, אין לחסום את פתח יציאת האוויר בחלקו הפנימי של המכסה.
- מוצר זה מיועד לשימוש ביתי בלבד.
- אין חיבור לחשמל, לחצו על לחצן ההפעלה כדי להפעיל את המכשיר.
- המכשיר יכנס למצב המתנה, האורות של לחצן ההפעלה והתצוגה יאירו.
- לחיצה על הלחצן במהלך הבישול מפסיקה את הפעולה ומכבה את המכשיר.
- בסיום התוכנית, היחידה תצפצץ 5 פעמים והתצוגה תציג ONE, האורות של הלחצנים יהיו כבויים מלבד לחצן ההפעלה, גוף החימום יפסיק לעבוד,
- המכשיר אינו מיועד לשימוש על ידי אנשים (לרבות ילדים) בעלי יכולת גופנית, ושהית או נשלית מוגבלת, או ללא ניסיון ידע נדרשים, אלא אם הם תחת פיקוח והשגחה
- או שקיבלו הנחיות שימוש מאדם האחראי על ביטחונם האישי.
- אין להשתמש במכשיר זה לטיגון עמוק.

טרם שימוש ראשון

- הסירו דבריהות את כל חומרי האירוז.
- לאחר הסרת חומרי האריזה, בחנו ודאאו כי המכשיר שלם ולא ניווק במהלך ההובלה. שמרו אותם לפחות כ-1 מימם מיום הרכישה או מקבלת המוצר ברכישה מקובנת. במקרה של מוצר שהגיע עם נזק, יש להחזיר את המוצר למקום הרכישה מיד עם אריזתו וכלל חלקיו.
- נקו את המכשיר טרם שימוש ראשון (ראו פרק 'ניקוי ותחזוקה').

הוראות הפעלה



תצוגה

בצב יופיע משך זמן הפעולה בשעות ודקות HH:MM וכן סמפטורות התוכנית.

תוכניות הפעלה

Air Crisp - **טיגון באוויר חם**
לחצו על הלחצנים/תצנים TIME שמאלה וימינה כדי להגדיר את משך הפעולה. לאחר מכן לחץ על לחצן START/STOP כדי להתחיל בפעולה. לחיצה קצרה תוביל לשינוי של דקה, לחיצה ארוכה (מעל שתי שניות) תוביל לשינוי של חמש דקות.

Roast - קלה
תוכנית המיועדת לקליית בשרים / ירקות.

Dehydrate - דובש
תוכנית המיועדת לייבוש פירות, ירקות או בשר להכנת חטיפים בתיים.

Bake - אפיה
תוכנית המיועדת לאפיית עוגות, מאפים קינוחים וכו',

Pizza - פיצה
תוכנית המיועדת לחימום פיצה בקוטר כ-20 ס"מ.

Broil -התשחמ/ הפשרה
תוכנית המיעדת להפשרה או להשחמת מזון (חימום עליון)

Grill - צליה
תוכנית המיועדת לצליית מזון למשל נתחי בשר וירקות.

Manual - ידנית
תוכנית גמישה בה ניתן להגדיר את הטמפרטורה והזמן.

נוריות חייו:

Preheat 'ימינום מוקדם': נורת חייוו ל'חימום מוקדם' תאיר עד הגעה לטמפרטורה הרצויה בה ניתן להכניס את המזון. בחח תוכנית והגדירו את הטמפרטורה, הזמן ולחצו על לחצן START/ STOP. עתה, נורת החייוו Preheat תאיר והמכשיר יתחמם עד שיעיג לטמפרטורה הפנימית הרצויה. לידיעתכם, אם מכסה המכשיר לא נפתח לאחר הגעת הטמפרטורה ליעדה בשלב 'ימינום המוקדם' שעתו העצב לא יתחיל והמכשיר ימשיך את 'ימינום המוקדם'.

שימו לב, בימינום חוזר וכשליעתכם אין צורך ב'ימינום מוקדם', ניתן ללחוץ פעם נוספת על התוכנית שנבחרה ונורת החייוו תעבור למצב של Add food 'הוספת מזון'.

Add food הוספת מזון': נורת חייוו ל'הוספת מזון' כשהחימום המקדים יסתיים, המכשיר יצפצץ תאיר נורת Add food 'הוספת מזון' ובצב שעתו העצר ('טימר') יחל פעולתו. בהשטע היצפצץ, יש לפתוח את המכסה ולהוסיף את המזון.

בפתיחת המכסה במהלך תהליך הבישול, היחידה תשהה פעולתה זמנית; בסגירת המכסה, היחידה תמשיך לפעול באופן אוטומטי ואין צורך ללחוץ שוב על לחצן START/ STOP. במהלך תהליך הבישול בתוכניות השונות, ניתן לבחון את הזמן והטמפרטורה על ידי לחיצה על לחצני TIME & TEMP.

לחצני הפעלה

לחצן הפעלה:
לאחר חיבור לחשמל, לחצו על לחצן ההפעלה כדי להפעיל את המכשיר. המכשיר יכנס למצב המתנה, האורות של לחצן ההפעלה והתצוגה יאירו. לחיצה על הלחצן במהלך הבישול מפסיקה את הפעולה ומכבה את המכשיר. בסיום התוכנית, היחידה תצפצץ 5 פעמים והתצוגה תציג ONE, האורות של הלחצנים יהיו כבויים מלבד לחצן ההפעלה, גוף החימום יפסיק לעבוד, לאחר הקירור ימשיכו לקרר את היחידה האלקטרונית. מאורח סיום קירור ה'ח' האלקטרונית, היחידה תצפצץ 5 פעמים והנורות יכבו.

11

חשוב! במהלך או בסיום פעולה אין להוציא את המכשיר מזרם החשמל. הוצאת המכשיר לפני סיום פעולת הקירור, עלולה לפגוע בהכטים האלקטרוני ותסיר על האחריות על המוצר.

לחצני TEMP סמפטורות: קביעת עוצמת המעלות בחח תוכנית הפעלה ומיד לאחר מכן, לחצו על הלחצנים/תצנים TEMP שמאלה וימינה כדי להגדיר את סמפטורות הבישול. לאחר מכן לחץ על לחצן START/STOP כדי להתחיל בפעולה. לחיצה קצרה תוביל לשינוי של חמש מעלות. לחיצה ארוכה (מעל שתי שניות) תוביל לשינוי של עשר מעלות.

לחצני TIME זמן: קביבת זמן בחח תוכנית הפעלה ומיד לאחר מכן, לחצו על הלחצנים/תצנים TIME שמאלה וימינה כדי להגדיר את משך הפעולה. לאחר מכן לחץ על לחצן START/STOP כדי להתחיל בפעולה. לחיצה קצרה תוביל לשינוי של דקה, לחיצה ארוכה (מעל שתי שניות) תוביל לשינוי של חמש דקות.

מצב STAND BY 'המתנה':
המכשיר יכבה אם לא יהיה מגע עם לוח הבקרה במשך דקה. המכשיר יכבה אם התוכנית הנבחרת תעצר, תבוטל או ללא כל אינטראקציה עם לוח הבקרה למשך כחמש דקות.

לחצן START/STOP הפעלה/עצירה:
לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 300C°/450F° ל- 120F°/50C°. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 60 דקות). לחצו על לחצן START/STOP כדי להתחיל את החימום המוקדם. נורת PREHEAT תאיר עד להגעה לטמפרטורה הרצויה. לאחר הגעה לטמפרטורה הרצויה, האור יכבה ויצפצץ למשך 5 צלילים.

מצב STAND BY 'המתנה':
המכשיר יכבה אם לא יהיה מגע עם לוח הבקרה במשך דקה. המכשיר יכבה אם התוכנית הנבחרת תעצר, תבוטל או ללא כל אינטראקציה עם לוח הבקרה למשך כחמש דקות.

מעבר בין תצוגת סמפטורות בצלילים / פרנהיטי:
במצב המתנה, לחצו בו-זמנית על לחצן ימיני TEMP ולחצן BRILL במשך כ-3 שניות. התצוגה תעבור בין C° ל-F°.

במהלך תהליך החימום והבישול, ניתן לשנות את תצוגת הטמפרטורה.

מגן התזה

ממוקם בחלק התחתון של המכסה. תפקידו מגן ההתזה לשמור על גוף החימום נקי. ודאו כי מגן ההתזה מותקן טרם ההפעלה. אי שימוש במגן ההתזה יגרום להצטברות שמן על גוף החימום, מה שעלול לגרום להופעת עשן.

הסרת מגן ההתזה

נקו את מגן ההתזה לאחר כל שימוש. המתינו שמגן ההתזה יתקרר לחלוטין.

לאחר מכן שלפו אותו לחיצה על התפס מימין כלפי מעלה והוצאת המגן.

התקנת מגן ההתזה

הכניסו בעדינות את מגן ההתזה למגרעות בצידי השמאלי של אלמנט החימום, ומצד ימין ודאו כי נשמעה נקישת אחר ההכנסה לתפס.

ודאו כי הכיתוב "FRONT" מופיע כלפי מטה.

תוכניות ההפעלה

תוכנית GRILL

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי. 2. לחצו על לחצן GRILL. 3. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 205C°/400F° ל- 205C°/400F°. 4. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 120 דקות). 5. לחצו על לחצן START/STOP כדי להתחיל את החימום המוקדם. 6. נורת PREHEAT תאיר עד להגעה לטמפרטורה הרצויה. 7. פתחו את המכסה והניחו את המזון בסיר (6). 8. בסיום המכשיר יצפצץ 5 צלילים END- יופיע במסך תצוגת LED. 9. השאירו את מכסה המכשיר פתוח לאחר הוצאת המזון כדי שהמכשיר יתקרר מהר יותר. 10. לידיעתכם, ניתן לפתוח את המכסה במהלך הפעולה. הטיימר עוצר וחוזר לפעול עם סגירת המכסה.

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי. 2. לחצו על לחצן GRILL. 3. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 205C°/400F° ל- 205C°/400F°. 4. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 30 דקות). 5. לחצו על לחצן START/STOP כדי להתחיל את החימום המוקדם. 6. נורת PREHEAT תאיר עד להגעה לטמפרטורה הרצויה. 7. פתחו את המכסה והניחו את המזון על רשת הגריל. 8. לאחר סגירת המכסה, הפעולה תתחיל והטיימר יחל לספור לאחור. 9. בסיום המכשיר יצפצץ 5 צלילים END- יופיע במסך תצוגת LED. 10. השאירו את מכסה המכשיר פתוח לאחר הוצאת המזון כדי שהמכשיר יתקרר מהר יותר. 11. לידיעתכם, ניתן לפתוח את המכסה במהלך הפעולה. הטיימר עוצר וחוזר לפעול עם סגירת המכסה.

12

LOW 300°F/150°C	MED 350°F/175°C	HIGH 400°F/205°C	MAX 450°F/230°C
שיפוד ירקות	סטייק	בשר קפוא	נקניקיות עגל
קבב	כנפיים	המבורגר	בשר בדובט סמיר
דג סול	חזה עוף	פילה סלמון	קלצונה
	חציל קלוי	פטירות	סופגניות
	צ'יפס בטטה	צ'יפס תפוז"א	עראיס

תוכנית AIR CRISP

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי. 2. לאחר מכן הניחו את סלסלת הטיגון הנשלפת (8) בסיר. 3. לחצו על לחצן AIR CRISP. 4. טמפ' בירות המחול היא 205C°/ 400F° והזמן הוא 18 דקות. 5. ניתן להשנות את הטמפרטורה באחד משני האופנים: 6. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 205C°/450F° ל- 120F°/50C°. 7. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 60 דקות). 8. לחצו על לחצן START/STOP כדי להתחיל את החימום המוקדם. 9. נורת PREHEAT תאיר עד להגעה לטמפרטורה הרצויה. 10. לאחר הגעה לטמפרטורה הרצויה, האור יכבה ויצפצץ למשך 5 צלילים.

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי ועליו שכבת מזון. 2. לאחר מכן הניחו את סלסלת הטיגון הנשלפת (8) בסיר ועליה שכבת גזן נוספת. 3. טמפ' בירות המחול היא במצב HIGH 205C°/ 120F° 50C° והזמן הוא 360 דקות. 4. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 200F°/93C° ל- 120F°/50C°. 5. לחצו על לחצן TIME כדי לבחון את זמן הבישול (חצי שעה עד 24 שעות). 6. לחיצה קצרה תוביל לשינוי של 2 שניות) תוביל לשינוי של 30 דקות. 7. פתחו את המכסה והניחו את המזון על סלסלת הטיגון. 8. לאחר סגירת המכסה, הפעולה תתחיל והטיימר יחל לספור לאחור. 9. התוצאות מטיבות, נעזו את הסלסלה עם מרכיבי המזון לחימום אחיד ופריך. 10. לשטע המזכיר טיגון מומלץ להתיז או למחח שכבה עדינה של שמן על המזון. 11. בסיום המכשיר יצפצץ 5 צלילים END- יופיע במסך תצוגת LED. 12. השאירו את מכסה המכשיר פתוח לאחר הוצאת המזון כדי שהמכשיר יתקרר מהר יותר. 13. לידיעתכם, ניתן לפתוח את המכסה במהלך הפעולה. הטיימר עוצר וחוזר לפעול עם סגירת המכסה.

תוכנית ROAST

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי. 2. לחצו על לחצן ROAST. 3. טמפ' בירות המחול היא במצב 380F°/ 175C° והזמן הוא 25 דקות. 4. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 205C°/400F° ל- 120F°/50C°. 5. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 240 דקות). 6. לחצו על לחצן START/STOP כדי להתחיל את החימום המוקדם. 7. נורת PREHEAT תאיר עד להגעה לטמפרטורה הרצויה. 8. לאחר הגעה לטמפרטורה הרצויה, האור יכבה ויצפצץ למשך 5 צלילים. 9. נורת ADD FOOD תאיר. 10. פתחו את המכסה והניחו את המזון בסיר (6). 11. בסיום המכשיר יצפצץ 5 צלילים END- יופיע במסך תצוגת LED. 12. השאירו את מכסה המכשיר פתוח לאחר הוצאת המזון כדי שהמכשיר יתקרר מהר יותר. 13. לידיעתכם, ניתן לפתוח את המכסה במהלך הפעולה. הטיימר עוצר וחוזר לפעול עם סגירת המכסה.

תוכנית BAKE

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי. 2. לחצו על לחצן BAKE. 3. טמפ' בירות המחול היא במצב 400F°/ 350F° 175C° והזמן הוא 25 דקות. 4. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 205C°/400F° ל- 120F°/50C°. 5. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 120 דקות). 6. לחצו על לחצן START/STOP כדי להתחיל את החימום המוקדם. 7. נורת PREHEAT תאיר עד להגעה לטמפרטורה הרצויה. 8. לאחר הגעה לטמפרטורה הרצויה, האור יכבה ויצפצץ למשך 5 צלילים. 9. נורת ADD FOOD תאיר. 10. פתחו את המכסה והניחו את המזון בסיר (6). 11. בסיום המכשיר יצפצץ 5 צלילים END- יופיע במסך תצוגת LED. 12. השאירו את מכסה המכשיר פתוח לאחר הוצאת המזון כדי שהמכשיר יתקרר מהר יותר. 13. לידיעתכם, ניתן לפתוח את המכסה במהלך הפעולה. הטיימר עוצר וחוזר לפעול עם סגירת המכסה.

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי ועליו שכבת מזון. 2. לאחר מכן הניחו את סלסלת הטיגון הנשלפת (8) בסיר. 3. לחצו על לחצן AIR CRISP. 4. טמפ' בירות המחול היא במצב HIGH 205C°/ 400F° והזמן הוא 18 דקות. 5. ניתן להשנות את הטמפרטורה באחד משני האופנים: 6. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 205C°/450F° ל- 120F°/50C°. 7. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 120 דקות).

13

תוכנית ROAST

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי. 2. לחצו על לחצן ROAST. 3. טמפ' בירות המחול היא במצב HIGH 400F°/ 205C° והזמן הוא 25 דקות. 4. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 205C°/425F° ל- 120F°/50C°. 5. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 240 דקות). 6. לחצו על לחצן START/STOP כדי להתחיל את החימום המוקדם. 7. נורת PREHEAT תאיר עד להגעה לטמפרטורה הרצויה. 8. לאחר הגעה לטמפרטורה הרצויה, האור יכבה ויצפצץ למשך 5 צלילים. 9. נורת ADD FOOD תאיר. 10. פתחו את המכסה והניחו את המזון בסיר (6). 11. בסיום המכשיר יצפצץ 5 צלילים END- יופיע במסך תצוגת LED. 12. השאירו את מכסה המכשיר פתוח לאחר הוצאת המזון כדי שהמכשיר יתקרר מהר יותר. 13. לידיעתכם, ניתן לפתוח את המכסה במהלך הפעולה. הטיימר עוצר וחוזר לפעול עם סגירת המכסה.

תוכנית DEHYDRATE

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי ועליו שכבת מזון. 2. לאחר מכן הניחו את סלסלת הטיגון הנשלפת (8) בסיר ועליה שכבת גזן נוספת. 3. טמפ' בירות המחול היא במצב HIGH 205C°/ 120F° 50C° והזמן הוא 360 דקות. 4. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 200F°/93C° ל- 120F°/50C°. 5. לחצו על לחצן TIME כדי לבחון את זמן הבישול (חצי שעה עד 24 שעות). 6. לחיצה קצרה תוביל לשינוי של 2 שניות) תוביל לשינוי של 30 דקות. 7. פתחו את המכסה והניחו את המזון על סלסלת הטיגון. 8. לאחר סגירת המכסה, הפעולה תתחיל והטיימר יחל לספור לאחור. 9. התוצאות מטיבות, נעזו את הסלסלה עם מרכיבי המזון לחימום אחיד ופריך. 10. לשטע המזכיר טיגון מומלץ להתיז או למחח שכבה עדינה של שמן על המזון. 11. בסיום המכשיר יצפצץ 5 צלילים END- יופיע במסך תצוגת LED. 12. השאירו את מכסה המכשיר פתוח לאחר הוצאת המזון כדי שהמכשיר יתקרר מהר יותר. 13. לידיעתכם, ניתן לפתוח את המכסה במהלך הפעולה. הטיימר עוצר וחוזר לפעול עם סגירת המכסה.

תוכנית PIZZA

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי. 2. לחצו על לחצן PIZZA. 3. טמפ' בירות המחול היא במצב 380F°/ 175C° והזמן הוא 25 דקות. 4. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 205C°/400F° ל- 120F°/50C°. 5. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 90 דקות). 6. לחצו על לחצן START/STOP כדי להתחיל את החימום המוקדם. 7. נורת PREHEAT תאיר עד להגעה לטמפרטורה הרצויה. 8. לאחר הגעה לטמפרטורה הרצויה, האור יכבה ויצפצץ למשך 5 צלילים. 9. נורת ADD FOOD תאיר. 10. פתחו את המכסה והניחו את המזון בסיר (6). 11. בסיום המכשיר יצפצץ 5 צלילים END- יופיע במסך תצוגת LED. 12. השאירו את מכסה המכשיר פתוח לאחר הוצאת המזון כדי שהמכשיר יתקרר מהר יותר. 13. לידיעתכם, ניתן לפתוח את המכסה במהלך הפעולה. הטיימר עוצר וחוזר לפעול עם סגירת המכסה.

תוכנית BROIL

1. הניחו את הסיר הנשלף (6) ביחידה בשקע היעודי ועליו את המזון. 2. לחצו על לחצן BROIL. 3. טמפ' בירות המחול היא במצב 400F°/205C° והזמן הוא 10 דקות. 4. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 205C°/450F° ל- 120F°/50C°. 5. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 60 דקות). 6. לחצו על לחצן START/STOP כדי להתחיל את החימום. 7. בתוכנית זאת אין 'ימינום מוקדם'. 8. בסיום המכשיר יצפצץ 5 צלילים END- יופיע במסך תצוגת LED. 9. השאירו את מכסה המכשיר פתוח לאחר הוצאת המזון כדי שהמכשיר יתקרר מהר יותר. 10. לידיעתכם, ניתן לפתוח את המכסה במהלך הפעולה. הטיימר עוצר וחוזר לפעול עם סגירת המכסה.

תוכנית MANUAL

1. זוהי תוכנית מיוחדת בה ניתן להתאים סמפטורה וזמן. 2. לחצו על לחצן MANUAL. 3. טמפ' בירות המחול היא במצב 120F°/50C° והזמן הוא דקה. 4. לחצו על לחצן TEMP ובחח סמפטורות רצויה בין 230C°/450F° ל- 120F°/50C°. 5. לחצו על לחצן TIME כדי לבחון את זמן הבישול (דקה עד 120 דקות).

14

טווח סמפטורות בתוכנית	טווח זמן בתוכנית	ברירת מחול	זמן (דקות)	תוכנית
120-450°F 50-230°C	דקות 1-60	400°F 205°C	18 mins	Air crisp
120-200°F 50-90°C	דקות 30-24 שעות	205°F 50°C	6 hours	Dehydrate
120-400°F 50-205°C	דקות 1-90	380°F 195°C	25 mins	Pizza
120-425°F 50-220°C	דקות 1-4 שעות	400°F 205°C	25 mins	Roast
120-400°F 50-205°C	דקות 1-2 שעות	350°F 175°C	25 mins	Bake
120-450°F 50-230°C	דקות 1-60	400°F 205°C	10 mins	Broil
120-450°F 50-230°C	דקות 1-30	LOW 300°F/ 150°C	20 mins	Grill
		MED 350°F 175°C		
		HIGH (default) 400°F 205°C		
		MAX 450°F 230°C		
Manual			1 min	

ניקוי ותחזוקה

1. נתקו את כבל החשמל לפני ניקוי המכשיר ואפשרו לאלמנט החימום להתקרר לחלוטין. 2. ניתן לנקות את המשטחים הפנימיים והחיצוניים של המכשיר ואביזריו במטלית רכה או ספוג עם חומר ניקוי ניטרלי ומעט מים. 3. אין להשתמש במברשות קשות או בחפצים חדים לניקוי. 4. הם עלולים לפגוע בציפוי ובשכבת ההגנה של האביזרים. 5. אין להשתמש בחומרי ניקוי תעליים ומאכלים כגון בבני, מדללים או פוליש. 6. ניתן לשטוף את הסיר, רשת הצליה וסלסלת הטיגון במדיח כלים. 7. אנו ממליצים לטבול את האביזרים במים חמים עם סבון כלים. 8. לקרצץ בנדרת המברשת (5), להשאיר את האביזרים עם המים והסבון עוד כ-10 דקות לאחר מכן לשפוך את המים, לקרצץ את השארים, לשטוף במים וליבש. 9. גבבו וייבשו את החלקים שנוקו לפני החיבור לחשמל. 10. אין לנקות במים או נוזל פחיל הדחייה והתקנו. 11. אין לטבול את המכשיר במים או כל נוזל אחר. 12. שלא בשימוש, יש לאחסן במקום מוצל ויבש.

הערות חשובות

1. בכל מצב, אם גוף החימום עובד, מאורר הקירור צריכים לעבוד גם כן. 2. בעת פעולת המכשיר, אם פותחים את המכסה, המכשיר משהה את הפעולה. אלמנט החימום והמאורר יעצרו את פעולתם. 3. סגור את המכסה והמכשיר ישוב לעבוד. 4. במהלך פעולת המכשיר, אם פותחים את המכסה יותר מ-4 דקות, היחידה תצפצץ 2 צלילים ל-10 שניות, לאחר דקה אחת, המכשיר יכבה אוטומטית. 5. במצב בו המכשיר פועל אי מושהה, בפתיחת המ

DESCRIPTION OF PARTS



1. Hood
2. Splatter shield (removable)
3. Main unit
4. Control panel
5. Brush
6. Non-stick cooking pot
7. Non-stick grill plate
8. Non-stick crisper basket

INTENDED USE

Use the device only for the purpose intended. Any other use may result in damage to the device or injuries.

IMPORTANT SAFEGUARDS

This product is an electric heating appliance. For your safety and convenience, please read this User Manual carefully and follow the steps. Please keep it for future reference. Please observe the following safety precautions before using this product.

SAVE THESE INSTRUCTION

1. Please read this User Manual carefully before using the product.
2. Do not immerse the power cord, plug and indoor grill in water in case of electric shock.
3. Before using this indoor grill, be sure to untie all the power cords wrapped around the back to avoid the accident.
4. When the electric indoor grill is working or after use, the external surface temperature is high, and touch is not allowed to prevent burns.
5. Use this product with extra care when children are around. Children are not allowed to use this product on their own or keep it out of reach of children
6. When the unit is on, do not swing the plug or socket to avoid strong currents and injuries by sparks.
7. Never hang the power cord on the edge of a cabinet/ table or on a hot surface.
8. If the power cord or plug is damaged, or the oven fails, stop using it and seek a professional to repair or replace it.
9. If the power cord is damaged, it shall be replaced by the manufacturer or a professional to avoid danger.
10. Do not damage, bend, stretch, or twist the power cord; do not place heavy objects on the power cord or clamp the power cord.
11. When the indoor grill is not in use, the plug shall be pulled out of the socket to avoid electric shock or electric leakage fire due to insulation aging.
12. The matching accessories shall be used correctly to avoid fire or injuries caused in operation.

13. The indoor grill shall be placed in a dry environment and shall not be used outdoors.

14. During the use of the indoor grill, provide at least 6 inches of space above and on all sides for air circulation..

15. Keep the indoor grill in a stable place and keep it away from flammable materials.

16. Only consumable food can be cook in the grill. Do not put large pieces of food or metal objects in the indoor grill in case of fire or danger.

17. Do not place the following items in the grill for grilling, such as paper, cards, plastic, cloth, and flammable items.

18. When moving or repairing the indoor grill, unplug the power cord and wait for the grill to cool before proceeding.

19. When the indoor grill is working, do not open the hood to move the cooking tray or other accessories to avoid burns caused by high temperature or high-temperature liquid.

20. Do not place anything on the indoor grill. Do not cover or obstruct the heat dissipation position of the indoor grill.

21. This product is for home use only. Do not use this grill for any other purpose not specified.

22. All maintenance must be carried out by professional personnel.

23. This appliance cannot be operated with an external timer or a separate remote control.

24. This device cannot be used by children, mental patients, people with physical challenges and those who are slow to respond unless guided by a person who is able to use it.

25. This appliance can be used by persons with reduces physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

26. Do not use this appliance for deep-frying.

BEFORE FIRST USE

1. Remove all packaging material, promotional labels, and tape from the unit.
2. Remove all accessories from the package and read this manual carefully. Pay particular attention to operational instructions, warnings and important safeguards to avoid any injury or property damage.
3. Wash the grill grate, splatter shield,crisper basket,cleaning brush,veggie tray,griddle kebabs,and cooking pot in warm,soapy water,then rinse and dry thoroughly. The grill grate,splatter shield,crisper basket,cooking pot are also dishwasher safe. NEVER clean the main unit in the dishwasher.

GETTING TO KNOW YOUR AIR FRYER GRILL



Display

The control panel display shows time in an HH:MM format. Cooking temperature and cooking time show alternating.

Function Buttons

Air crisp:

For crispiness and crunch with little to no oil, like French fries.

Roast:

Tenderize meats, roast vegetables and more.

Dehydrate:

Dehydrate meats, fruits and vegetables for healthy homemade snacks.

Bake:

Use to bake cakes,treats,desserts and more.

Pizza:

Use to cook pizza, fits for 8 inch pizza.

Broil:

This function is suitable for thawing all kinds of meat.

Grill:

Grill indoors while creating even char, grill marks and grilled flavor.

Manual:

It is an additional function for manual setting for different kinds of food and different flavor.

Tips Buttons

Preheat:

Press the START/STOP button to begin preheating after choose the preset program (Function buttons above mentioned), or if need to adjust the time or temperature (these time and temperature adjusting are specially for cooking process, preheat process cannot be adjusted) .The light of preheat button will turn on. It takes about 5 minutes to preheat, depending on the selected temperature setting.

NOTE: Time or temperature of preheat process are set, cannot be adjusted. If no need the preheat process, press the chosen function/program button again during the preheat process, then cancel the preheat process and ADD FOOD light turn on for notification.

Add food:

When preheating is complete, the unit will beep and the light of Add Food button will turn on. Open the hood and place ingredients on the cooking plate. Once the hood is closed, cooking will begin and the timer will start counting down. If need to open the hood during the cooking process, unit will pause temporary; close the hood, unit will continue the previous working automatically, no need to press START/STOP button again. After 3 seconds, if press START/STOP button, then pause cooking process.

During the cooking process, time and temperature can be adjusted by pressing the TIME & TEMP arrow button. If the hood do not open to add the food inside after the preheat process finished, unit will keep working as the preheat mode.

Operating Buttons

Power Button:

Once the unit is plugged in, press the power button to turn on the unit. It will enter the standby mode, lights of power button and display turn on. Pressing it during cooking stops the current cooking function and turns off the unit.

Once the cooking process finished, unit will beep 5 sounds and display shows END, lights of buttons will be off except the Power button, heating element stops working, motor will keep working 1 minute then display turn off, all lights turn off, enter into switch off mode. If need to stop working in advance, press power button to switch off.

TEMP arrows:

Use the left and right arrows to adjust the cooking temperature in any function, choosing any program and then adjust the cooking temperature if need, then press START/STOP button to start cooking. When using the Grill function, toggle the GRILL button or TEMP arrow button to adjust cooking temperature mode -- LOW, MED, HIGH, MAX.

To adjust the temperature, every adjustment with 10°F/5°C by pressing one time the arrow buttons; if long press the arrow buttons more than 2 seconds, every adjustment with 30°F/10°C fast change.

TIME arrows:

Use the left and right TIME arrows to adjust the cook time in any function, choosing any program and then adjust the cooking time if need, then press START/STOP button to start cooking.

To adjust the time, every adjustment with 1 minute by pressing one time the arrow buttons, of long press the arrow buttons more than 2 seconds, every adjustment with 5 minutes fast change.

NOTE: To adjust temperature or time during cooking, press the up and down arrows. The unit will then resume at those setting. All the time or temperature adjustments before preheating, during preheating and cooking are referring to cooking process, not preheat process.

START/STOP button:

After selecting temperature and time, press the START/STOP button to begin cooking. During the preheat process, press the START/STOP button, unit pause working, display flash - - - -: press START/STOP button again, continue working. During cooking process, press the START/STOP button, unit pause working, display showing time stops, press button again, continue working.

If need to re-choose the function during the preheat and cooking process, need to press START/STOP button and then re-choose the function.

Standby Mode:

The unit will power off if no any interaction with the control panel for 1 min. The unit will power off if choosing function is stop or canceled and no any interaction with the control panel for 5 min.

Under the standby mode, in the same time, press Temperature arrow button and Broil button together to change temperature symbol °C and °F, display will show F or C, after chosen, will confirm in 3 seconds. During the preheat and cooking process, can change the temperature symbol in the same way.

USING THE AIR FRYER GRILL

Splatter Shield

Located on the underside of the hood, the splatter shield keeps the heating element clean. ALWAYS ensure the splatter shield is installed when cooking. Failure to use the splatter shield will result in oil buildup on the heating element,which can cause smoking.

REMOVING THE SPLATTER SHIELD

Remove the splatter shield for cleaning after every use. First allow the splatter shield to cool completely, then remove it by using your thumb to release the front clip by pushing the front clip upward and using your other hand to pull one of the tabs toward you. This will release the splatter shield, allowing you to pull it out of the slot along the back of the hood.

INSTALLING THE SPLATTER SHIELD

To install, gently push the splatter shield into the back of the hood. Insert the back tab a shield with the slot on the back of the hood. Then push the splatter shield upward until it clicks into the clip on the front of the hood.

Cooking Functions

Ensure the unit is plugged in before turning it on. Press the power button.

GRILL

1. Place the cooking pot in the unit with the indent on the pot aligned with the rear bump on the main unit. Then place the grill grate in the pot.

2. Press the GRILL button .The default temperature is HIGH 400°F /205°C and default time is 20 minutes. Press Grill or TEMP arrow buttons to adjust the temperature setting include LOW, MED, HIGH, MAX and press TIME arrow to adjust cooking time from 1 min to 30 min.

3. Press the START/STOP button to begin preheating. The light will turn on during preheating.

4. When Preheating is complete, the light will turn off and beep for 5 sounds.

5. The light of ADD FOOD will turn on.

6. Open the hood and place ingredients on the grill grate. Once the hood is closed, cooking will begin and the timer will start counting down.

NOTE: during cooking, you can open the hood to check on or flip your food. The timer will pause when the hood is opened and then automatically resume after it is closed.

7. When cook time is complete,the unit will beep 5 sounds and END will appear on the LED display screen. Keep the hood open after removing your food so the unit will cool down more quickly.

GRILL CONTROL

When using the Grill function,you will need to select the grill grate temperature setting. Below are recommended temperature levels for common ingredients.

LOW 300°F/150°C	MED 350°F/175°C	HIGH 400°F/205°C	MAX 450°F/230°C
sausages	Frozen meats	Steaks	Vegetables
Using thick barbecue sauce	Marinated sauced meat	Chicken wings	Kebabs
Calzones	Salmon	Chicken breast	Tuna fillet
Donuts	Mushroom	Sweet potato fries	
Pita & Meat	French fries	Eggplant	

AIR CRISP

1. Place the cooking pot in the unit with the indent on the pot aligned with the bump on the main unit.Place the crisper basket in the pot,then close the hood.
2. Press the AIR CRISP button .The default temperature is 400°F/205°C and default time is 18 minutes. Press TEMP arrow button to adjust the temperature setting from 120°F/50°C to 450°F/230°C and press TIME arrow to adjust cooking time from 1 min to 60 mins.
3. Press the START/STOP button to begin preheating. The light will turn on during preheating.
4. When Preheating is complete,the light will turn off and beep for 5 sounds.
5. The light of ADD FOOD will turn on.
6. Open the hood and place ingredients on the grill grate. Once the hood is closed,cooking will begin and the timer will start counting down.
7. For best result, we recommend shaking ingredients frequently. When you open the hood,the unit will Pause. Use silicone tipped tongs when tossing your food or oven mitts to shake the basket. When done,replace the basket and close the hood . Cooking will automatically resume after hood is closed.

ROAST

1. Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit,then close the hood.
2. Press the ROAST button. The default temperature is

400°F/205°C and default time is 25 mins will display. Use the TEMP arrows to adjust cooking temperature from 120°F/50°C to 425°F/218°C and press TIME arrow to adjust cooking time from 1 min to 240 mins.

3. Press the START/STOP button to begin preheating. The light will turn on during preheating.

4. When Preheating is complete,the light will turn off and beep for 5 sounds.

5. The light of ADD FOOD will turn on.

6. Open the hood and place ingredients in the pot. Once the hood is closed,cooking will begin and the timer will start counting down.

BAKE

1. Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit,then close the hood.
2. Press the BAKE button. The default temperature is 350°F/175°C and default time is 25 mins will display. Use the TEMP arrows to adjust cooking temperature from 120°F/50°C to 400°F/205°C and press TIME arrow to adjust cooking time from 1 min to 120 min.
3. Press the START/STOP button to begin preheating. The light will turn on during preheating.
4. When Preheating is complete,the light will turn off and beep for 5 sounds.
5. The light of ADD FOOD will turn on.
6. Open the hood and place ingredients in the pot. Once the hood is closed, cooking will begin and the timer will start counting down.

DEHYDRATE

1. Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit, then add a single layer of ingredients to the bottom of the pot. Place the crisper basket in the pot and add a layer of ingredients to the bottom of the basket. Close the hood.
2. Press the DEHYDRATE button. The default temperature is 120°F/50°C and default time is 360 mins will display. Use the TEMP arrow buttons to adjust cooking temperature from 120°F/50°C to 200°F/93°C and press TIME arrow buttons to adjust cooking time from 0.5 H to 24 H. If long press the arrow buttons more than 2 seconds, every adjustment with 30 minutes fast change.

3. Press the START/STOP button to begin .The unit does not need to preheat.

4. When dehydration time is complete,the unit will beep and END will appear on the display screen. Remove your food and close the hood.

NOTE: The unit does not preheat in this function.

PIZZA

1. Place pizza plate in the unit with the indent on the pot aligned with the bump on the main unit,then close the hood.
2. Press the Pizza button. The default temperature is 380°F/195°C and default time is 25 mins will display. Use the TEMP arrows to adjust cooking temperature from 120°F/50°C to 400°F/205°C and press TIME arrow to adjust cooking time from 1 min to 90 mins.
3. Press the START/STOP button to begin preheating. The light will turn on during preheating.
4. When Preheating is complete,the light will turn off and beep for 5 sounds.
5. The light of ADD FOOD will turn on.
6. Open the hood and place ingredients in the pizza plate. Once the hood is closed,cooking will begin and the timer will start counting down.

BROIL

1. Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit,Place ingredients in the pot ,then close the hood.
2. Press the Broil button. The default temperature is 400°F/205°C and default time is 10 mins will display. Use the TEMP arrows to adjust cooking temperature from 120°F/50°C to 450°F/230°C and press TIME arrow to adjust cooking time from 1min to 60 min.
3. Press the START/STOP button to begin . The unit does not preheat in Broil mode.
4. When cook time is complete,the unit will beep and END will appear on the display screen. Remove your food and close the hood.

NOTE: The unit does not preheat in this function.

MANUAL

1. It is a special function for different food and different flavor .
2. The default temperature is 120°F/50°C and default time is 1 min will display. Use the TEMP arrows to adjust cooking temperature from 120°F/50°C to 450°F /230°C and press TIME arrow to adjust cooking time from 1 min to 120 min.

NOTE: The unit does not preheat in this function.

Program Conclusion:

Function	Time (default)	Temp. (default)	Time range	Temp. range
Air crisp	18 mins	400°F 205°C	1-60 mins	120-450°F 50-230°C
Dehydrate	6 hours	120°F 50°C	30 mins - 24 hours	120-200°F 50-90°C
Pizza	25 mins	380°F 195°C	1 - 90 mins	120-400°F 50-205°C
Roast	25 mins	400°F 205°C	1 min - 4 hours	120-425°F 50-220°C
Bake	25 mins	350°F 175°C	1 min - 2 hours	120-400°F 50-205°C
Broil	10 mins	400°F 205°C	1 - 60 mins	120-450°F 50-230°C
Grill	20 mins	LOW 300°F/ 150°C MED 350°F 175°C HIGH (default) 400°F 205°C MAX 450°F 230°C	1 - 30 min	Not adjustable
Manual	1 min	120°F 50°C	1 min - 2 hour	120-450°F 50-230°C

NOTE:

Use the up and down TIME arrows to set the cooking time in 1 minute increment. Press the up and down TIME arrows in 2 seconds to set the cooking time in 5 minutes increment. The Dehydrate will in 30 min increment. Use the up and down TEMP arrows to set the cooking temperature, in 5°C/10°F increment. Press the up and down TEMP arrows in 2 seconds to set the cooking temperature, in 10°C/30°F increment.

CARE AND MAINTENANCE

1. Unplug the power cord before cleaning the indoor grill and allow the grill to cool down completely.
2. The inner and outer surfaces of the grill, grill plate, cooking pot and crisper basket can be cleaned with a soft cotton cloth or sponge with a neutral detergent and cleaned with water.
3. Do not use hard brushes or articles for cleaning to avoid damaging the inner surface of the grill and the protective layer of the accessories.
4. Do not use toxic and corrosive cleaning agents such as gasoline, thinners, or polish.
5. The cleaned parts must be wiped dry before plugging in.
6. Please do not clean the heating tube.
7. Do not immerse the grill in a liquid such as water.

SAFETY STATEMENT

1. Under any condition, if heating element works, motor should work in the same time.
2. Under working condition, if open the hood, unit goes into pause stage, heating element and motor should stop working. Close the hood, unit continue working.
3. During working condition, if open the hood more than 4 minutes no other operation, unit beeps 2 sounds every 10 seconds, after 1 minute, unit switches off automatically.
4. Under working or standby mode, open the hood, display shows OPEN; under switch off mode, open the hood, display shows - - - .
5. Unit with function self-checking and defectives notification.

SPECIAL STATEMENT

1. All contents of this document have been carefully checked. If there is any misunderstanding of print or content, the company reserves the right of final interpretation.
2. For the technical improvements of the product, they will be compiled into the new manual without prior notice; if the appearance and color of the product are changed, the actual product shall prevail.
3. This product is for home use only.

DISPOSAL

Proper disposal of this product.

This label indicates that, in the EU, electronic devices cannot be disposed of with regular household waste.

Please use the return or collections systems of your municipality or contact the seller where you purchased this product.

INFORMATION AND SERVICE

If you have question or concerns about your product, please visit our website: www.westinghousehomeware.com, or contact our oversea offices/agents.

In line with our policy of continuous product development, we reserve the right to change product, packaging and documentation specifications without notice.